

## Technical Product Notes

## Locking Out Inverter Settings on the NV7600 Hyrid Inverter

DATE CREATED:

TN NUMBER:

PREPARED BY:


12/23/2025

TN-NV7600-006


Patrick Honegger

The installer can lockout all essential settings such as grid export control limits through the inverter's Basic Setting page. The lockout function is password protected.

Navigate to the System Setup page and click Basic Setting to activate the lockout function.

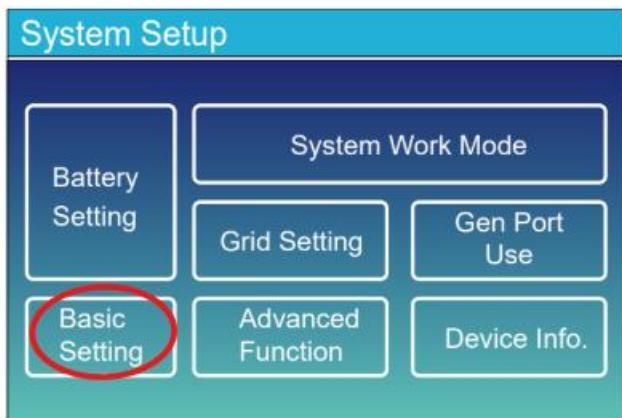

Select "Lock out all changes" and click the check mark at the bottom right of the screen. The user is prompted to enter the password "7777." To unlock the inverter settings, deselect the "Lock out all changes" box and reenter the password.

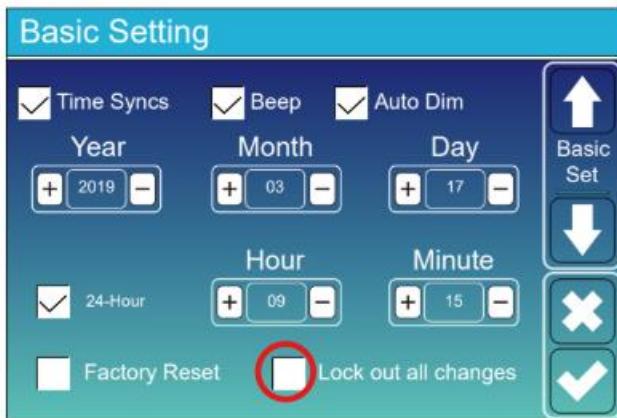

Version	Revision Date	Brief Description of Change
V1.0	01/07/2026	Document Published