


## Knowledge Base Article

### How to Lock Out All Setting Changes?

An installer can password protect all inverter settings such as "Grid Sell Back Limit" if the utility provider requires a max solar sell back to be password protected.

1. On the main inverter screen, click on the "Gear Icon" on the upper right corner.

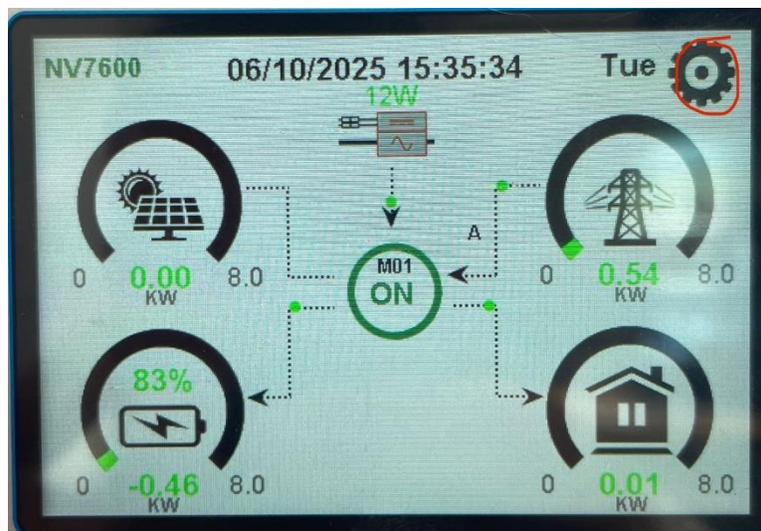

2. Click on "Basic Settings".




## Knowledge Base Article

3. Select the box next to "Lock out all changes" to place a check mark in it, then click the check mark at the bottom right.



4. Enter default password 7777 and click "OK"

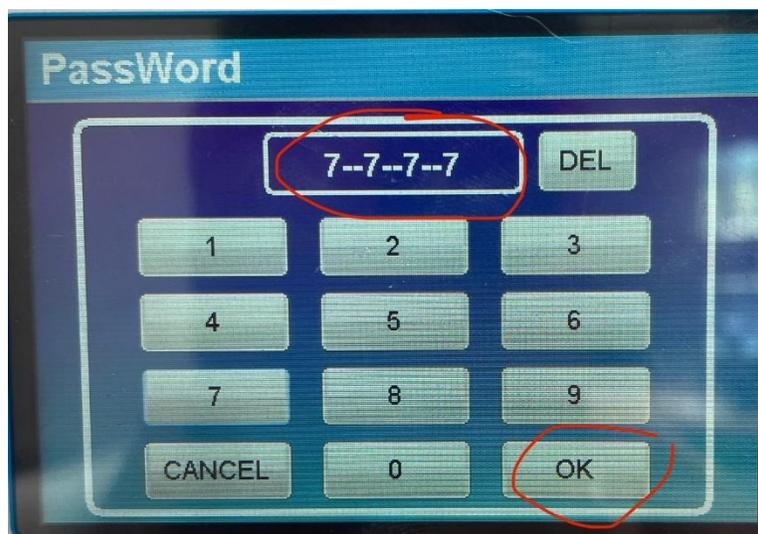

## Knowledge Base Article

5. All fields containing a value will now appear with a light gray background, indicating that they cannot be modified unless the "Lock out all changes" box is unchecked, and the default password is re-entered.

