


Knowledge Base Article

How to Use the Mounting Bracket Option on the NV7600?

The NV7600 inverter supports two wall-mounting bracket options. It can be securely installed on either concrete walls or stud-framed walls. When required, the spacer bracket may be used to ensure a level and stable installation.

1. To use the four existing mounting hanging feet (marked in red) instead of the optional hanging bracket, you will need to remove the pre-attached hanging receiver bracket from the inverter (marked in yellow).

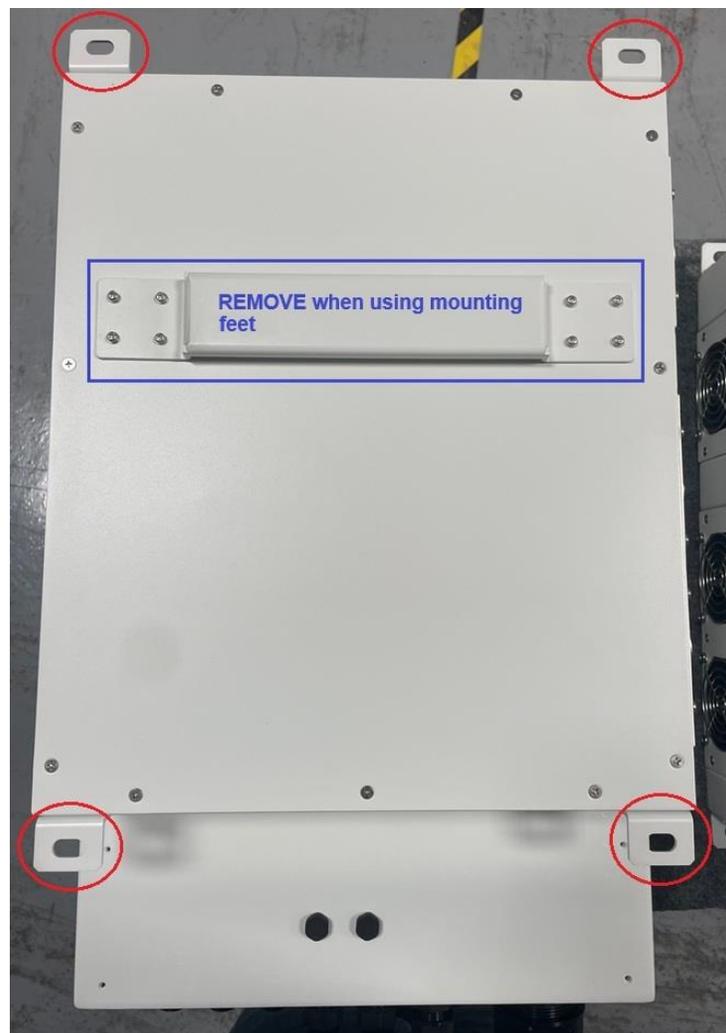

Knowledge Base Article

2. To use the optional hanging bracket (marked in blue) instead of the mounting hanging feet, an additional spacing bracket needs to be installed to ensure the inverter hangs plumb. When using the hanging bracket, the four mounting feet (marked in red) can be removed.

