


## Knowledge Base Article

### How to Set the Battery Depth of Discharge in Solarman Business?

The installer should set the Depth of Discharge (DOD) according to the homeowner's preferences while following NeoVolta's warranty policy. Technical Support can provide remote assistance with Solarman Business upon request.

1. Identify the desired DOD.
2. For example, using 10% DOD.

Go to System Work Mode 2. Change the Batt % to the DOD, in this example 10%.

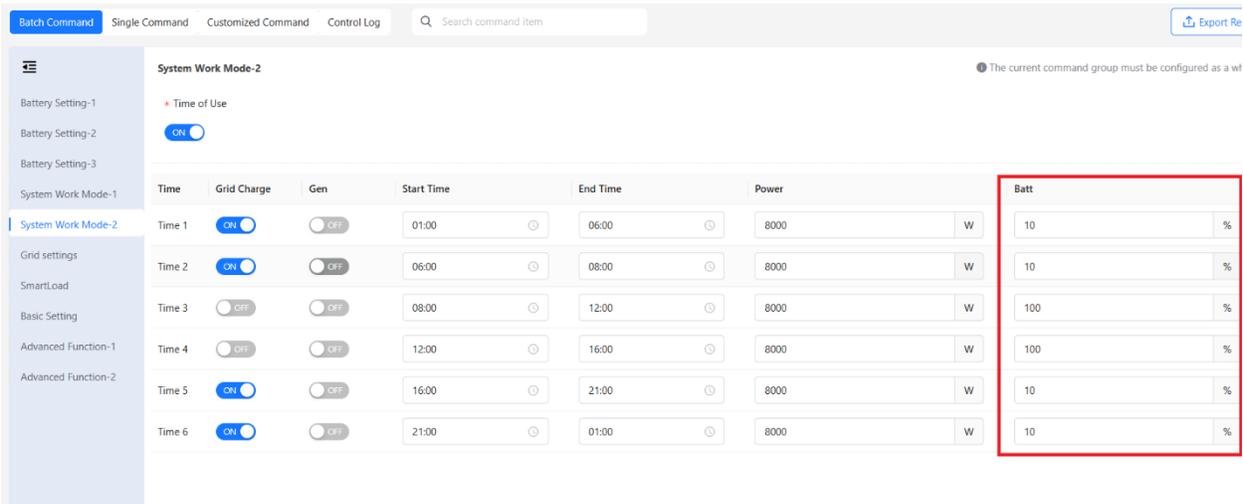

The screenshot displays the 'System Work Mode-2' configuration page. The interface includes a top navigation bar with 'Batch Command', 'Single Command', 'Customized Command', and 'Control Log' tabs, along with a search bar and an 'Export Re' button. A sidebar on the left lists various settings like 'Battery Setting-1', 'Grid settings', and 'SmartLoad'. The main content area shows a table with columns for 'Time', 'Grid Charge', 'Gen', 'Start Time', 'End Time', 'Power', and 'Batt'. The 'Batt' column values are 10, 10, 100, 100, 10, and 10 for Time 1 through Time 6 respectively. A red box highlights the 'Batt' column.

Time	Grid Charge	Gen	Start Time	End Time	Power	Batt
Time 1	ON	OFF	01:00	06:00	8000	10
Time 2	ON	OFF	06:00	08:00	8000	10
Time 3	OFF	OFF	08:00	12:00	8000	100
Time 4	OFF	OFF	12:00	16:00	8000	100
Time 5	ON	OFF	16:00	21:00	8000	10
Time 6	ON	OFF	21:00	01:00	8000	10

3. Go to Battery Setting 3. Change Grid Start from 20% to 10%. The Grid Start % should match the System Work Mode 2 battery minimum %.